

680.072 **WARMHOUDVITRINE** - SPARE PART LIST

NO	CODE	DESCRIPTION	Q'TY
1	Z-FW-001A	R60-2 TOP COVER ASSEMBLY	
2	Z-FW-002A	MILKY-WHITE CURVED PLATE	
3	Z-FW-003	OIL TRAY	
4	Z-FW-004	PHILLIPS PAN HEAD SCREW	
5	Z-FW-005A	HEATING ELEMENT PROTECTING	
6	Z-FW-006A	BOTTOM LAYER BOARD ASSEMBLY	
7	Z-FW-007A	RUNNER	
8	Z-FW-008A	HEATING ELEMENT	
9	Z-FW-009	UPHOLDER OF HEATING ELEMENT	
10	Z-FW-010	PHILLIPS PAN HEAD SCREW	
11	Z-FW-011	FLAT WASHER	
12	Z-FW-012	SPRING WASHER	
13	Z-FW-013	NUT	
14	Z-FW-014	POWER CORD WITH PLUG	
15	Z-FW-015	SWITCH	
16	Z-FW-016	INDICATOR/YELLOW	
17	Z-FW-017	DIAL	
18	Z-FW-018	TEMPERATURE KNOB	
19	Z-FW-019	PAN HEAD SCREW	
20	Z-FW-020	SCREW WITH FLAT WASH	
21	Z-FW-021	CONTROL PANEL	
22	Z-FW-022	EGO THERMOSTAT	
23	Z-FW-023	POWER CORD JACKET	
24	Z-FW-024	DISPLAYER	
25	Z-FW-025A	BOTTOM BOARD ASSEMBLY	
26	Z-FW-026	PRESSER BIT OF GLASS	
27	Z-FW-027	ROUND HEAD SCREW	
28	Z-FW-028	HEX SCREW	

680.072 **WARMHOUDVITRINE** - SPARE PART LIST

NO	CODE	DESCRIPTION	Q'TY
29	Z-FW-029	RUBBER FOOT	
30	Z-FW-030	HEX NUT	
31	Z-FW-031A	SUPPORT PLATE OF HEATING	
32	Z-FW-032	INSTALLATION BOARD FOR HEATING	
33	Z-FW-033A	LEFT SUPPORT PLATE FOR LAYER	
34	Z-FW-034	RUBBER STRIP	
35	Z-FW-035A	HANDLE OF FRONT DOOR GLASS	
36	Z-FW-036A	FRONT DOOR GLASS	
37	Z-FW-037A	GRID(BIG)	
38	Z-FW-038A	RIGHT SUPPORT PLATE FOR LAYER	
39	Z-FW-039A	GRID(MIDDLE)	
40	Z-FW-040A	GRID(SMALL)	
41	Z-FW-041A	BRACING OF LAYER	
42	Z-FW-042A	RIGHT TRIGONAL LAMP BRACKET	
43	Z-FW-043A	SIDE GLASS	
44	Z-FW-044	ROUND HEAD ZINC COATED SCREW	
45	Z-FW-045A	HANDLE OF BACK DOOR GLASS	
46	Z-FW-046A	BACK DOOR GLASS	
47	Z-FW-047	BARRETTER	
48	Z-FW-048	STARTER	
49	Z-FW-049	STARTER SEAT	
50	Z-FW-050	LAMP BULB	
51	Z-FW-051	LAMP CAP/CERAMIC	
52	Z-FW-052A	FRAMEWORK ASSEMBLY	
53	Z-FW-053	STRIP LAMP BASE	
54	Z-FW-054	STRIP LAMP	
55	Z-FW-055A	LEFT TRIGONAL LAMP BRACKET	